



No Slack, Simple & Fast in FTTH Deployment

# Instruction Manual

## Installation MG-PL00-A on the pole

Installation  
Guide #

IG-MG-PL00-A

Date of  
Enactment

2023-12-12

No. of  
Revision

01

Page

1/1


### Contents

1. General
2. MG-PL00-A Configuration & Assembly

### 1. General

This user manual provides the method for mounting brackets.  
This manual will help you install the hardened terminal on the pole.

### 2. MG-PL00-A Configuration & Assembly

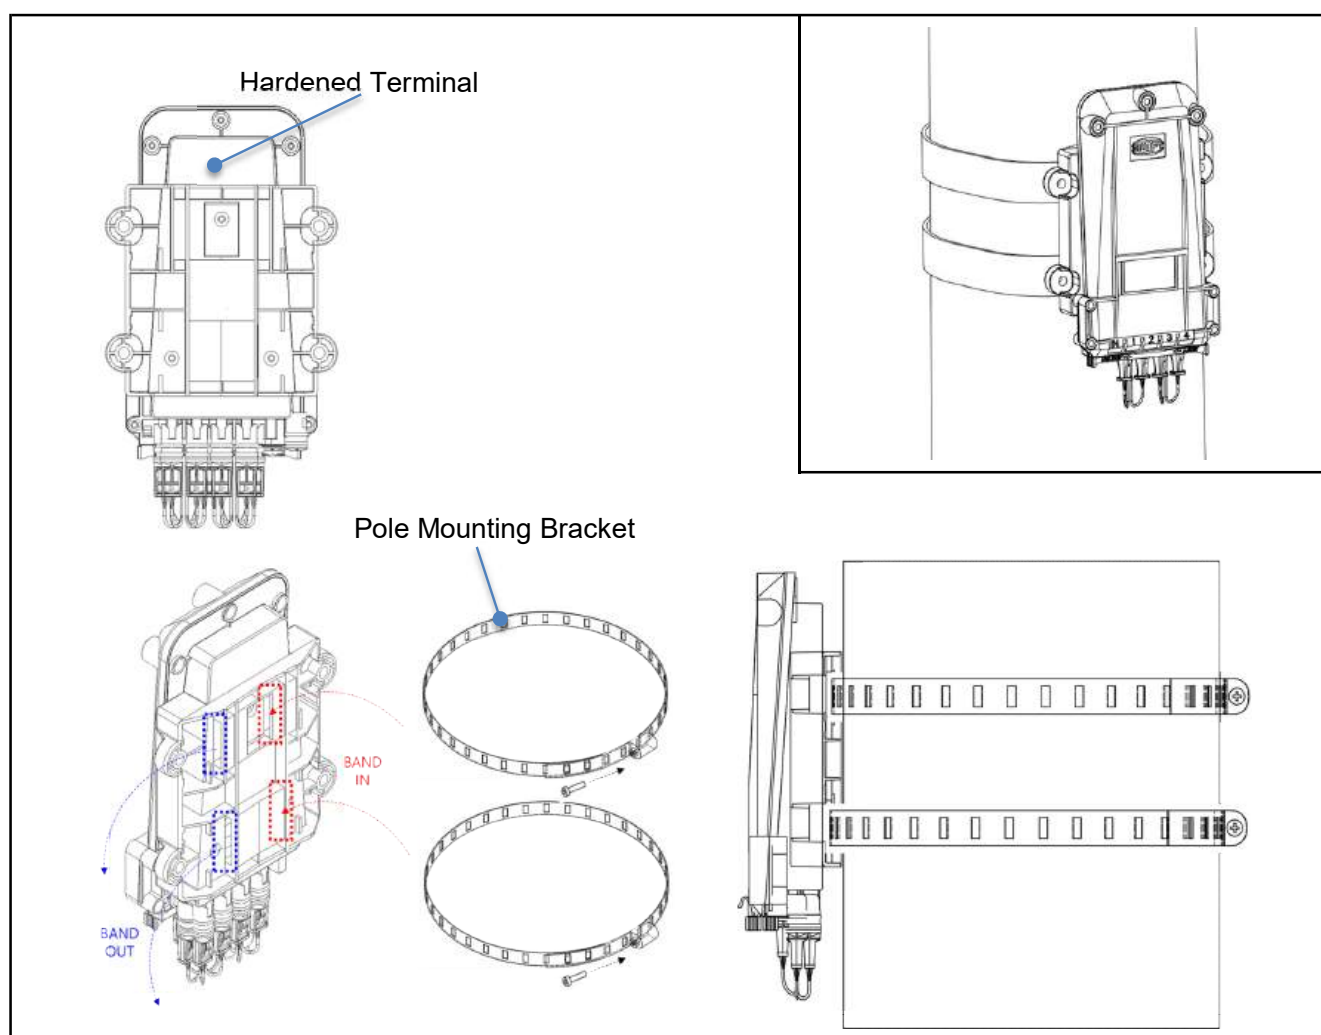



No Slack, Simple & Fast in FTTH Deployment

# Instruction Manual

## Installation MG-ST00-A on the stand

Installation  
Guide #

IG-MG-ST00-A

Date of  
Enactment

2023-12-12

No. of  
Revision

01

Page

1/1


### Contents

1. General
2. MG-ST00-A Configuration & Assembly

#### 1. General

This user manual provides the method for mounting brackets.  
This manual will help you install the hardened terminal on the stand.

#### 2. MG-ST00-A Configuration & Assembly

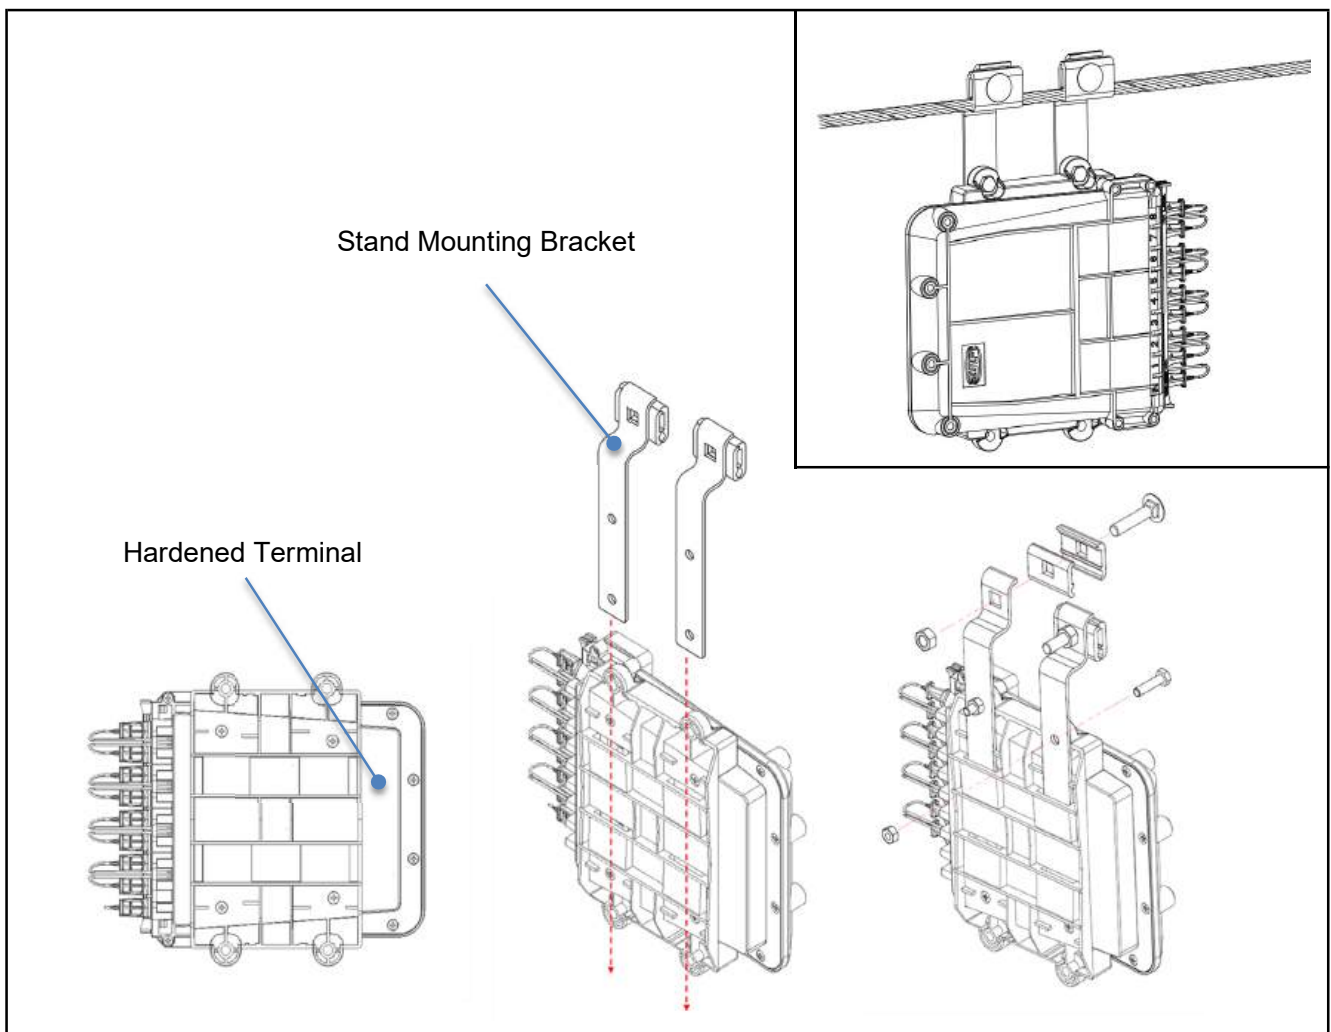



No Slack, Simple & Fast in FTTH Deployment

# Instruction Manual

## Installation MG-ST00-B on the cable

Installation  
Guide #

IG-MG-ST00-B

Date of  
Enactment

2023-12-12

No. of  
Revision

01

Page

1/1

### Contents


1. General
2. MG-ST00-B Configuration & Assembly

### 1. General

This user manual provides the method for mounting brackets.

This manual will help you install the hardened terminal on the cable.

### 2. MG-ST00-B Configuration & Assembly

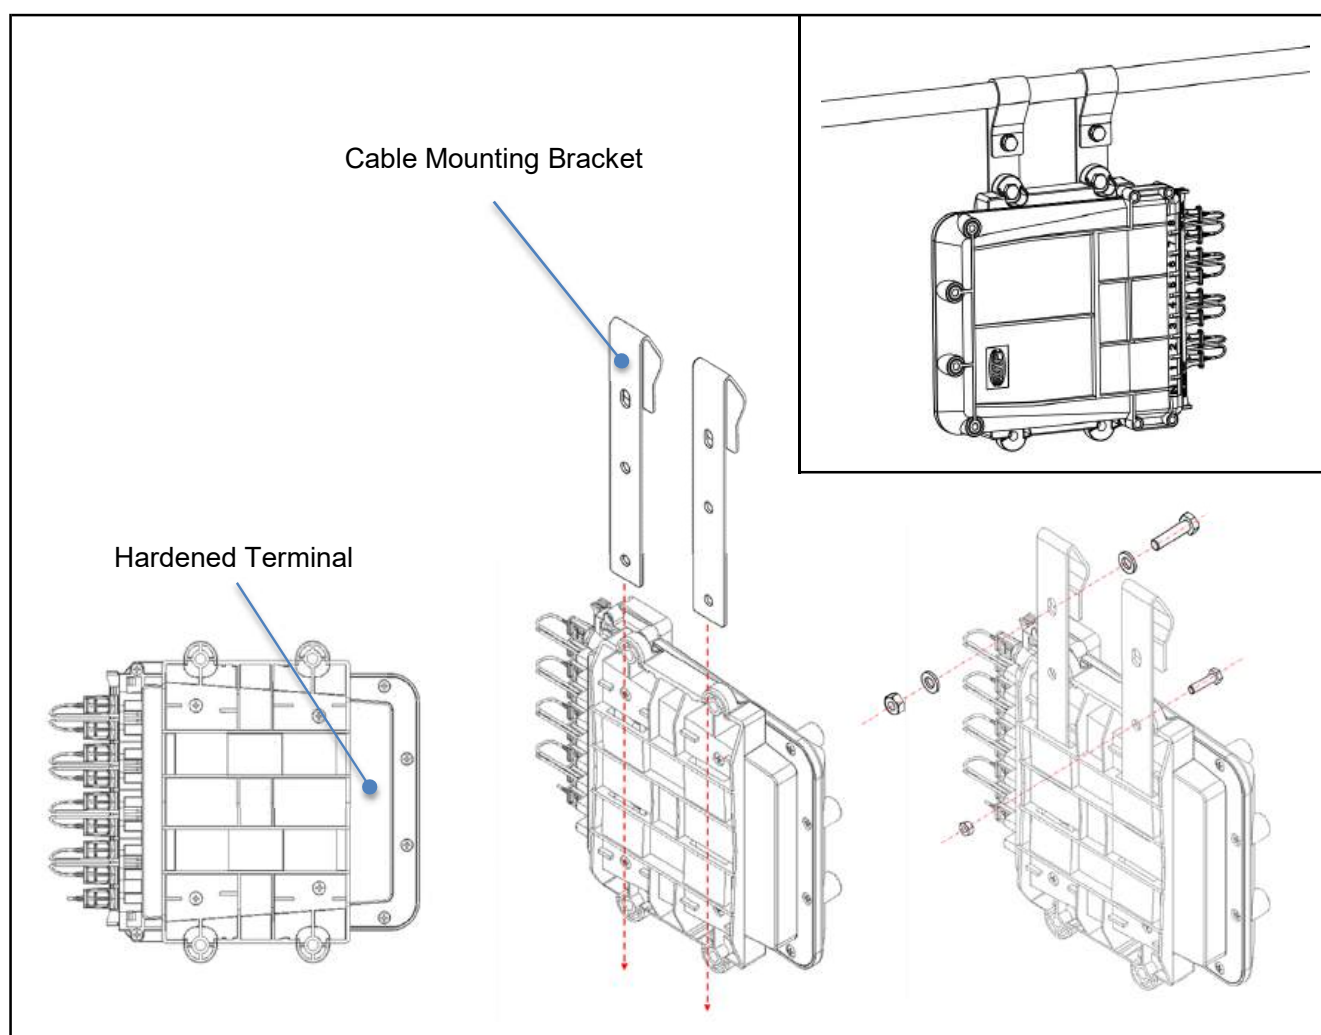



No Slack, Simple & Fast in FTTH Deployment

# Instruction Manual

## Installation MG-SW00-A on the wall

Installation  
Guide #

IG-MG-SW00-A

Date of  
Enactment

2023-12-12

No. of  
Revision

01

Page

1/1

### Contents

1. General
2. MG-SW00-A Configuration & Assembly

#### 1. General

This user manual provides the method for mounting the swing bracket.  
This manual will help you install the hardened terminal on the wall.

#### 2. MG-SW00-A Configuration & Assembly

